

PARTS CATALOGUE FOR

Card module Version 2.0

* Parts List

Main body

1.	XA3033001	TOP COVER	
2.	XA3034001	BOTTOM COVER	
3.	XA3035001	DECORATION PLATE (PE-DESIGN)	
	XA3036001	DECORATION PLATE (ECS)	
4.	XA3038001	RUBBER CUSHION	
5.	136681001	SCREW	
6.	085311415	SCREW	
7.	XA3042001	MAIN PC BOARD ASSEMBLY	
8.	410336001	FUSE	
9.	X80923001	AC ADAPTOR 120V (U.S.A., CANADA)	
	XA0315001	AC ADAPTOR 220V	
10.	UB6969001	IF CABLE	
	XA8784001	IF CABLE (AUSTRALIA, NEW ZEALAND)	ADD
11.	X60977000	SF PAD	
12.	191910116	INSTRUCTION MANUAL (ENGLISH)	CHG
	191910117	INSTRUCTION MANUAL (ECS, ENGLISH)	CHG
13.	XA0154001	BLANK MEMORY CARD	
	XA0154002	BLANK MEMORY CARD (U.S.A., CANADA)	
14.	XA6150001	QUICK START GUIDE (ENGLISH ONLY)	ADD
	XA6150101	QUICK START GUIDE	CHG
15.	X60973001	CARTON (PE-DESIGN)	
	X61194101	CARTON (ECS)	CHG
16.	X60976100	MAIN BODY PAD	



